

## CLEANING/STORAGE

### FAN CLEANING

- Always unplug the fan before cleaning.
- Do not allow water to drip on or enter into fan housing.
- Be sure to use a soft cloth moistened with or without a mild soap solution.
- Do not use any of the following as a cleaner: gasoline, thinner, or benzene.

### Fan Blade Cleaning

(See instructions for fan head assembly, Fig. 1).

1. To access the fan blade, remove the front grill and blade cap.
2. Clean the fan blade, front and rear grills with a soft moist cloth.
3. Replace blade, tighten blade cap, and securely fasten the front grill.

### Fan Head, Base and Pole Cleaning

Using a soft, moist cloth with or without a mild soap solution carefully clean the fan base, pole and head. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

### FAN STORAGE

Your fan can be stored in the off season either partially disassembled or assembled. It is important to keep it in a safe dry location.

- If stored disassembled, we recommend using the original (or appropriately sized) box.
- If stored assembled or partially assembled, remember to protect the fan head from dust.

**NOTE:** This fan can also be used during the cold winter season to circulate warm air throughout your home.

If you have any questions regarding your product or would like to learn more about other Holmes® products, please contact our Consumer Service Department at 1-800-546-5637 or visit our website at [www.holmesproducts.com](http://www.holmesproducts.com).

## WARRANTY INFORMATION

### 3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### How to Obtain Warranty Service

#### In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

#### In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

# Holmes®

## Owner's Guide

HASF1515  
HASF1516



## 16-inch (40cm) Oscillating Stand Fan

**PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS**

© 2011 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All Rights Reserved.  
Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

153623/9100010012511

HASF1515/151611EM1

Printed in China


GCDS-HOL22210-PH

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or return to an authorized service facility for examination and/or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. Do not use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.
16. Do not operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use ONLY and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of electrical shock and injury to persons, do not use in window.
19. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
20. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

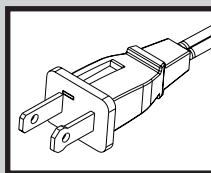

**THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.**

**DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.**

## FEATURES - OPERATIONS

### ASSEMBLY INSTRUCTIONS

**NOTE:** MAKE SURE YOU REMOVE ALL CONTENTS FROM THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO ASSEMBLE YOUR FAN.

#### Pole Assembly


You will need the base, extension pole, and pole screw (See Fig. 1).

1. Take the extension pole, with the pole screw towards the bottom, and insert into base.
2. Tighten into place using the pole screw.

#### Fan Head Assembly

You are now ready to assemble the fan head (See Fig. 1).

1. Position the rear grill over the motor shaft, making certain the 2 notches at the top and bottom of the rear grill fit over the 2 prongs on the motor housing.

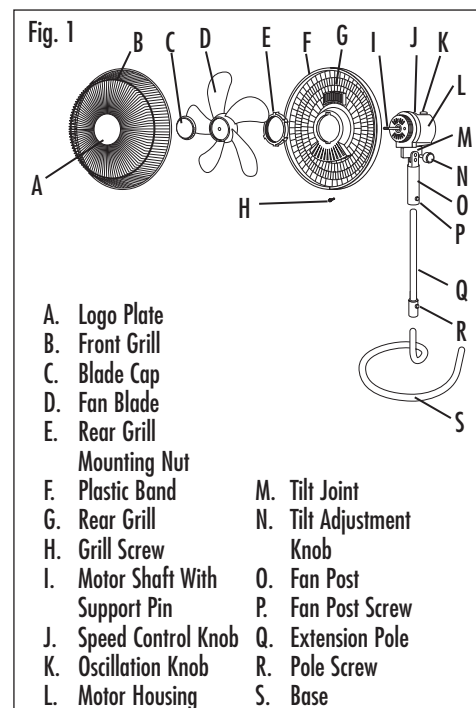

- |                                 |                         |
|---------------------------------|-------------------------|
| A. Logo Plate                   | M. Tilt Joint           |
| B. Front Grill                  | N. Tilt Adjustment Knob |
| C. Blade Cap                    | O. Fan Post             |
| D. Fan Blade                    | P. Fan Post Screw       |
| E. Rear Grill                   | Q. Extension Pole       |
| F. Plastic Band                 | R. Pole Screw           |
| G. Rear Grill                   | S. Base                 |
| H. Grill Screw                  |                         |
| I. Motor Shaft With Support Pin |                         |
| J. Speed Control Knob           |                         |
| K. Oscillation Knob             |                         |
| L. Motor Housing                |                         |

Please make sure the rear grill fits securely against the motor housing.

2. Secure the rear grill in its place using the rear grill mounting nut. Turn this nut clockwise and tighten firmly.
3. Slide the fan blade, with the hollowed interior of the blade facing towards the rear grill firmly onto the motor shaft. Make sure the motor shaft pin lines up with the recessed groove in the back of the fan blade. Also, be sure the shaft protrudes from the front of the blade.
4. Secure fan blade onto the motor shaft by turning the blade cap counter-clockwise and tighten firmly.
5. Prepare the front grill by simply snapping the logo plate into place.
6. Center the front grill by aligning the Holmes logo so that it is horizontal and parallel to the floor, and then place onto the rear grill. Lastly, snap the front and rear grills completely together, and tighten the grill screw at the bottom of the rear grill (See Fig. 1).

#### Final Assembly

Place fan post onto the extension pole, and securely tighten the fan post screw.

### OPERATING INSTRUCTIONS

1. Set fan base on a dry, level surface.
2. Plug cord into any standard 120 volt AC outlet. Please make sure the Speed Control Knob is in the OFF (O) position. The Speed Control Knob is located on the top of the Fan Motor Housing.
3. The speed is adjusted by turning the control knob to the desired setting, OFF - (O), HIGH - (III), MEDIUM - (II), LOW - (I).
4. The Oscillation control knob ( ) is located on the top of the Fan Motor Housing. To start Oscillation, push Oscillation Knob down. To stop Oscillation, pull Oscillation Knob all the way up.

**SPECIAL NOTE:** This fan can be used in a "straight up position" (TotalFlex™) as a whole room air circulator (See the Adjustment Instructions).


## FEATURES - OPERATIONS CLEANING / MAINTENANCE

### ADJUSTMENT INSTRUCTIONS

#### Tilt Adjustment

Follow these instructions to tilt the Fan Head for upward angled air movement or whole-room air circulation. You may use the oscillation feature in this position.

1. To change the tilting angle of the fan head, simply loosen the Tilt Adjustment Knob (See Fig. 2).
2. Move the fan head to the desired angle, and firmly tighten the knob to lock in place.
3. This fan can be tilted to a straight-up position, offering whole room air circulation. When the fan head is tilted back, be sure to securely tighten in place.

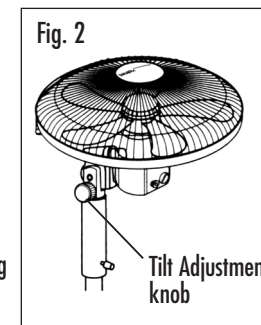

#### Floor Fan Conversion/Height Adjustment

Follow these instructions to convert the fan into a floor fan.

1. Loosen the fan post screw and remove fan head (See Fig. 1).
2. Remove the extender pole by unscrewing the pole screw at the base.
3. Re-attach the fan head to the base and secure with the fan post screw.

### CLEANING / MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your fan. Please remember:

#### REPLACEABLE FUSE

If your (5 Amp, 125 Volt) replaceable fuse blows, please order a new fuse at 1-800-546-5637. Follow the below instructions to replace the fuse on the plug.

#### User Servicing Instructions

1. Unplug your fan. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover, located on the top of the plug, by using your thumb or a flathead screwdriver to slide the cover down towards the prongs.

**Note:** Ensure that fuse cover is completely open before attempting to remove fuse.

3. Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse (see Fig. 3).

4. Place plug on a solid, flat surface. Insert new 5 Amp, 125 Volt fuse into fuse compartment and use a small screwdriver to secure the metal ends of the fuse into the compartment.
5. Slide fuse cover closed completely. If fuse cover is difficult to close, make sure fuse is secured in place completely by pressing down on metal ends of the fuse.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

